

Petunjuk Pemakaian



Prestige


Model : 5¼" BST-522-MK II

Kantor Pusat :

Jl. Margomulyo No. 5 Tandes, Surabaya 60185 Telp. : +62 31 - 7480011, 7494222

Ruang Pamer :

Surabaya : Pasar Genteng Baru Lt.III U-3 Surabaya, Telp. +62 31 - 83909695
Jakarta : Ruko Glodok Plaza Blok F-97, Jl. Pinangsia Raya, samping Bank OCBC NISP
Mangga Besar - Jakarta Barat. Telp. : 021 - 6493139

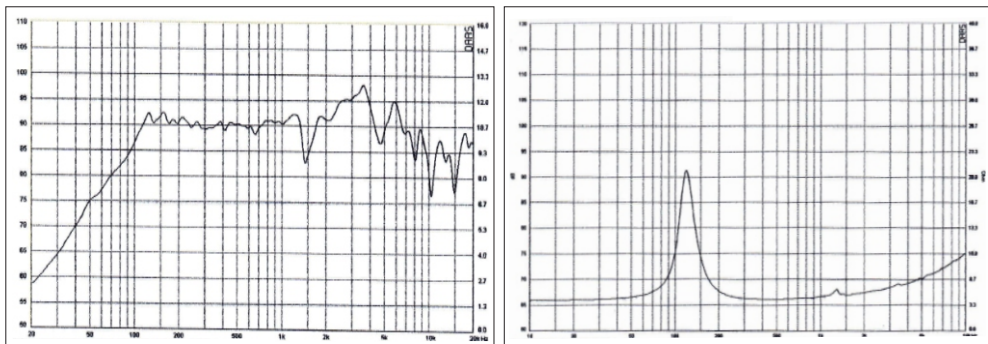

Spesifikasi

Diameter speaker (inch/mm)	5¼ inch / 133.35 mm
Daya maksimum (Watt)	100 Watt*
Lebar daerah frekuensi (Hz)	105 Hz - 20 KHz
SPL (2.83 V / 1 m) (dB)	91 dB
Medan magnet (T)	1 T
Berat magnet (Kg/Oz)	0.14 kg / 5.09 Oz
Voice coil diameter (mm)	25.42 mm

* IEC 268-5, (in box system, cut.off 20-500 Hz)

Parameter "Thiele-Small"

Fs (Hz)	105 Hz
DCR (Ω)	3.7 Ω
Qts	0.88
Qes	1.06
Qms	5.02
Mms (g)	2.9 g
Cms (mm/N)	0.72 mm/N
BL Product (Tm)	2.6 Tm
Vas (liters)	5.0 liters
No (%)	0.62 %
Sd (cm ²)	70.9 cm ²
Xmax (mm)	2.17 mm

Perhatian!

Sebelum memulai instalasi (pemasangan), harap memperhatikan instalasi dasar.

Jika anda belum mempunyai pengalaman dalam pemasangan, kami sarankan anda datang dan berkonsultasi dengan dealer yang terdekat.

Pemasangan kawat (listrik)

