

Petunjuk Pemakaian



Prestige


Model : 6½" BST-1614

Kantor Pusat :

Jl. Margomulyo No. 5 Tandes, Surabaya 60185 Telp. : +62 31 - 7480011, 7494222

Ruang Pamer :

Surabaya : Pasar Genteng Baru Lt.III U-3 Surabaya, Telp. +62 31 - 83909695
Jakarta : Ruko Glodok Plaza Blok F-97, Jl. Pinangsia Raya, samping Bank OCBC NISP
Mangga Besar - Jakarta Barat. Telp. : 021 - 6493139

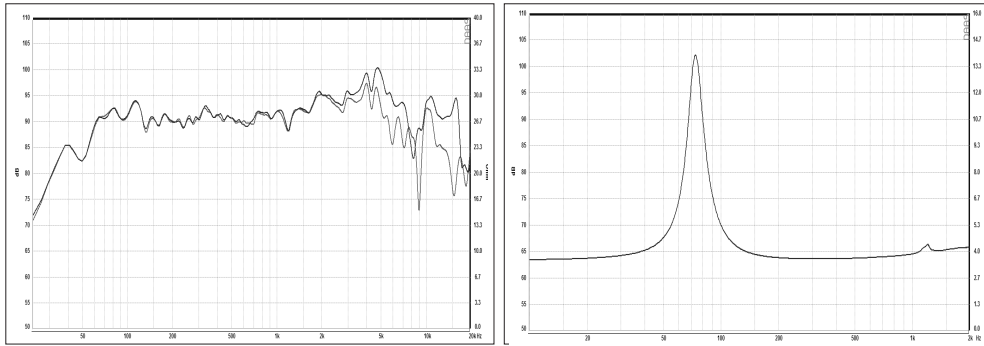

Spesifikasi

Diameter speaker (inch/mm)	6½ inch / 165 mm
Daya maksimum (Watt)	100 Watt*
Lebar daerah frekuensi (Hz)	73 Hz - 19 KHz
SPL (2.83 V / 1 m) (dB)	90 dB
Medan magnet (T)	0.93T
Berat magnet (Kg/Oz)	0.14 kg / 5.11 Oz
Voice coil diameter (mm)	20.42 mm

* IEC 268-5, (in box system, cut.off 20-500 Hz)

Parameter "Thiele-Small"

Fs (Hz)	73 Hz
DCR (Ω)	3.6 Ω
Qts	1.32
Qes	1.78
Qms	5.10
Mms (g)	6.9 g
Cms (mm/N)	0.68 mm/N
BL Product (Tm)	2.5 Tm
Vas (liters)	14.4 liters
No (%)	0.31 %
Sd (cm ²)	122.7 cm ²
Xmax (mm)	1.54 mm

Perhatian!

Sebelum memulai instalasi (pemasangan), harap memperhatikan instalasi dasar. Jika anda belum mempunyai pengalaman dalam pemasangan, kami sarankan anda datang dan berkonsultasi dengan dealer yang terdekat.

Pemasangan kawat (listrik)

